

Entrust Artista® CR805

---

## **Retransfer Card Printer**


May 2021

527692-001EN, Rev J

**WARNING:**


For detailed installation instructions, refer to the *CR805 Retransfer Card Printer Installation and Administrator's Guide*.
 
## 1 Unpack the Printer

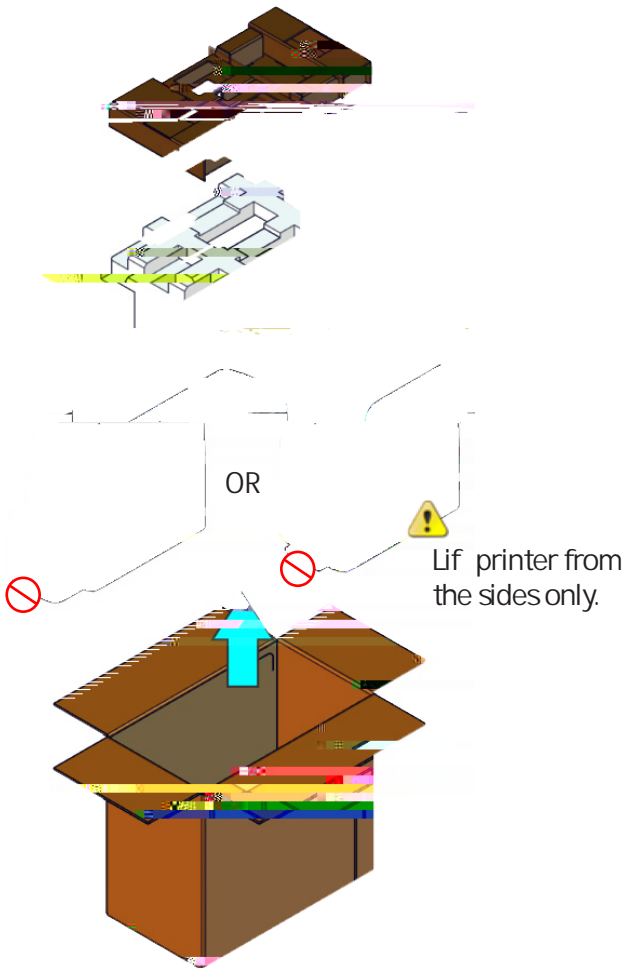

## 2 Secure the Printer (Optional)

 
a

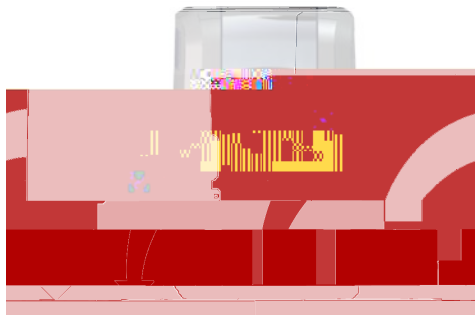

b




 c



## 3 Install the Optional Multi-Hopper

 
1. Unpack the mult -hopper.

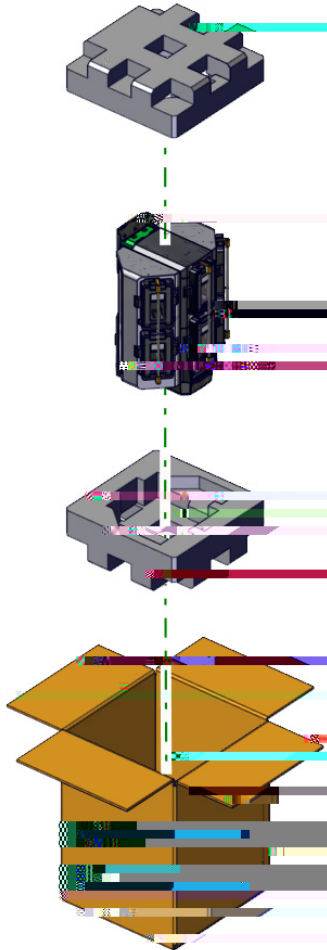


# CR805 Retransfer Card Printer

## Install the Optional Mult-Hopper (cont.)

 2. Prepare the mult-hopper.

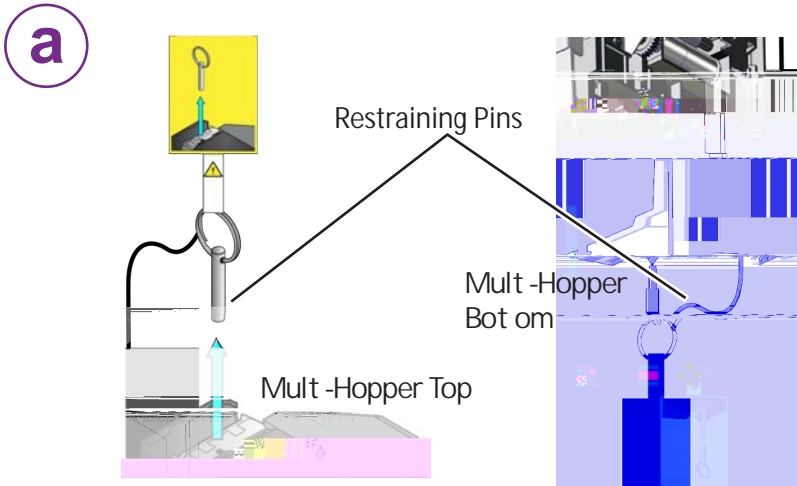


 **i** Save the restraining pins after removing them from the mult-hopper. They are required if you need to repackage and return the mult-hopper for service.

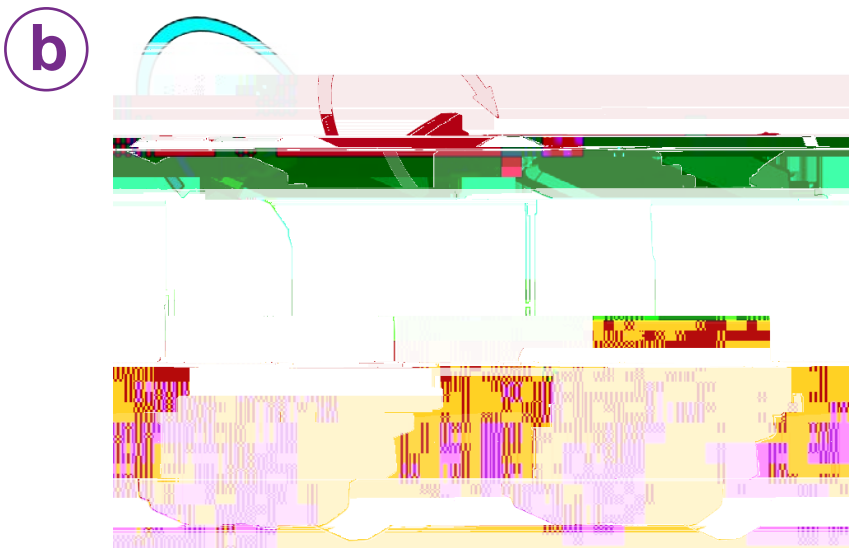

## Install the Optional Mult-Hopper (cont.)

 3. Assemble the mult-hopper printer.

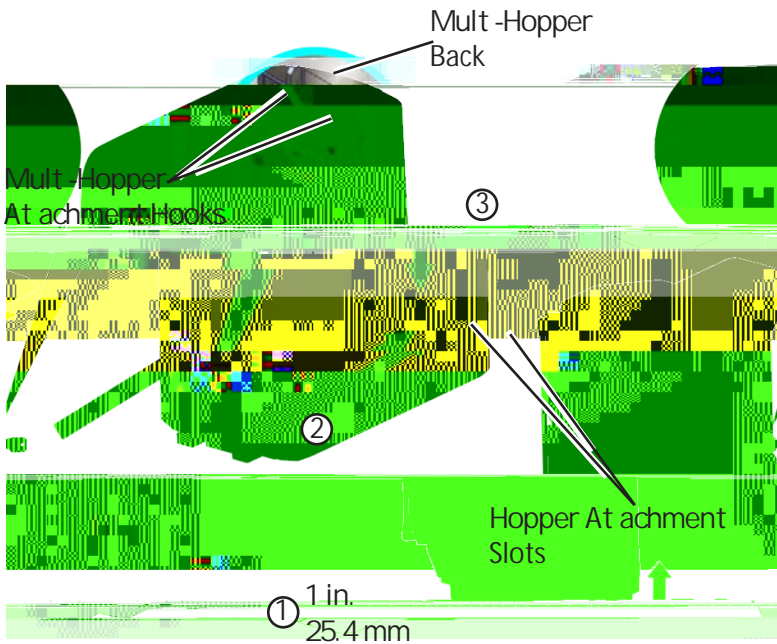

# CR805 Retransfer Card Printer

 
 
---

## 4 Plug In and Power On the Printer

a



b

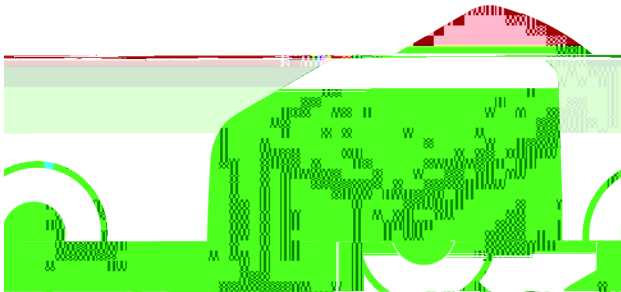






**a**



 **b**

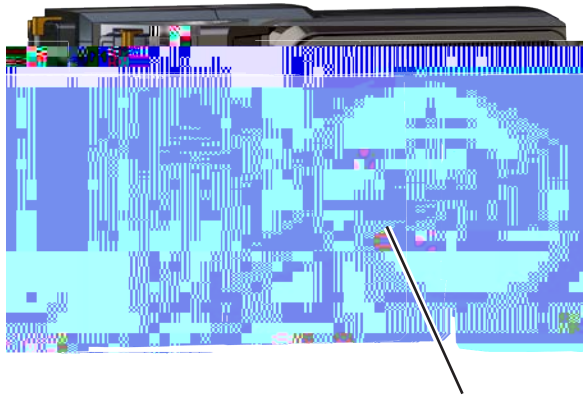

**c**

---

 


## 6 Install the Ink Ribbon

a



b

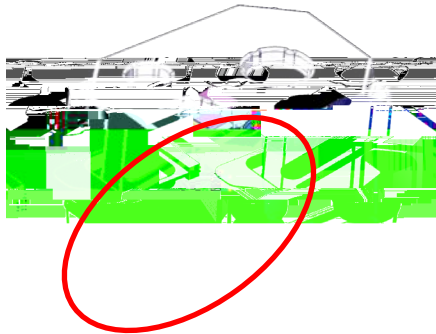


## Install the Ink Ribbon (cont.)


c



 
d

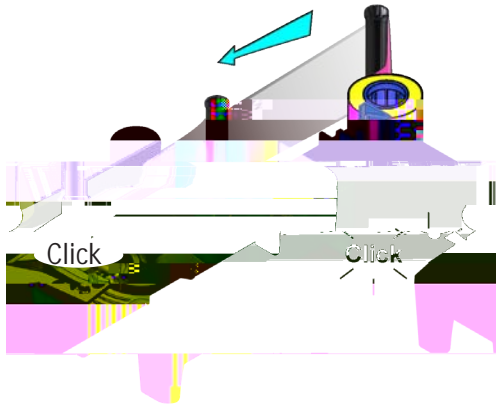

e

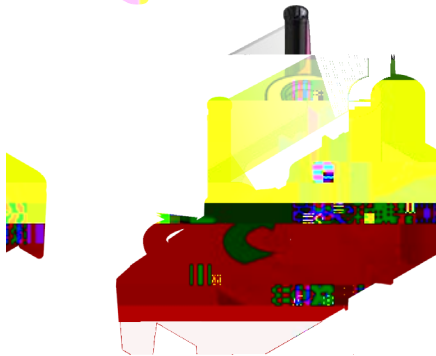 



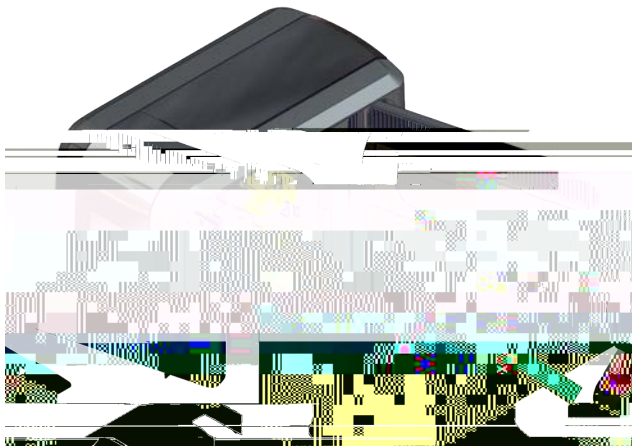 


## 8 Install the Retransfer Film

a



 b

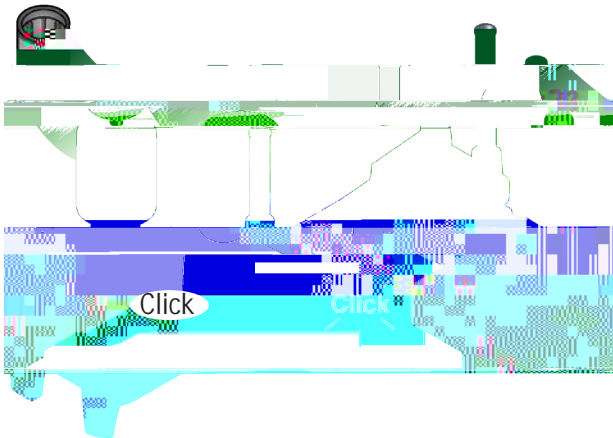




## Install the Retransfer Film (cont.)

c




d

 e

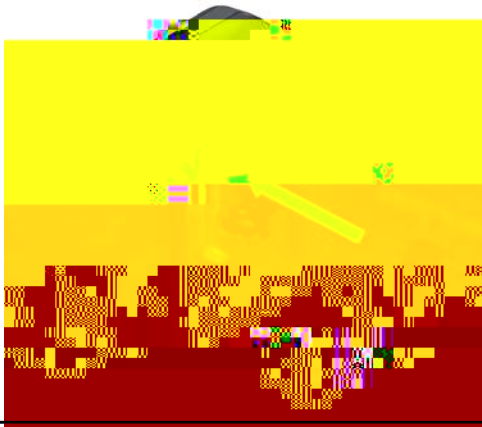

## 9 Store the User Reference Guide

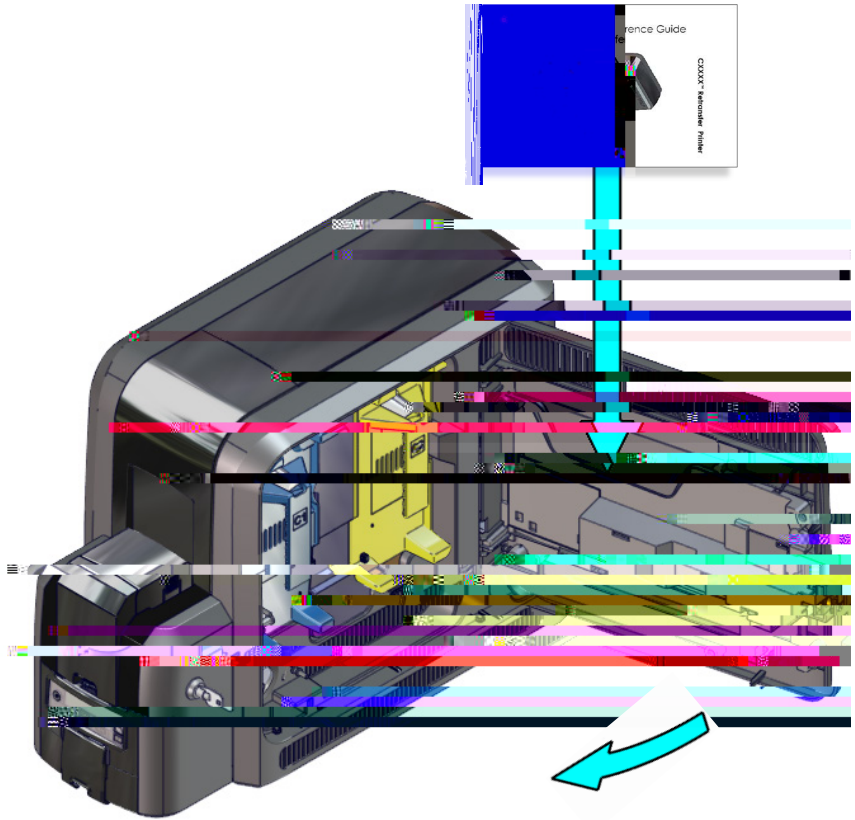 

# 10 Load Cards

"Single-Hopper Printer"

"Mult-Hopper Printer" on page 18

 
 
## Single-Hopper Printer



# CR805 Retransfer Card Printer

---


a

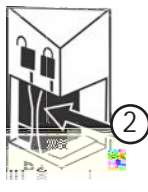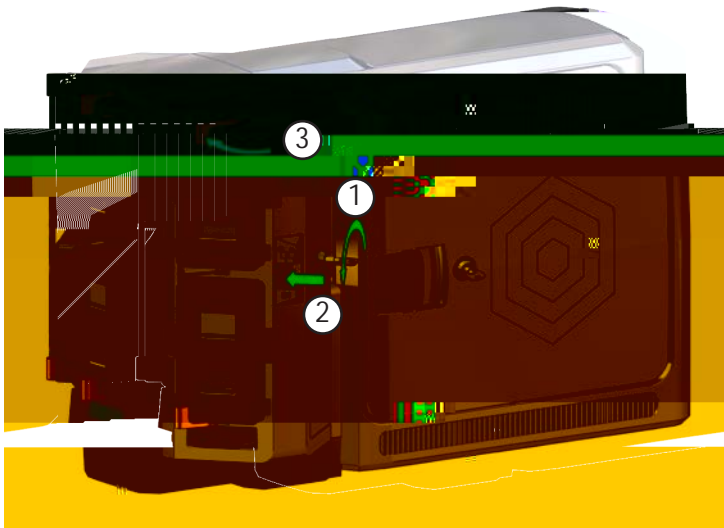

## Load Cards (cont.)

**b**

 
4. Press the cartridge release button at the top of the cartridge and open the cartridge door.
5. Lift the card weight to the top of the cartridge and pull it forward until it locks in position.
6. Load the cards into the cartridge.
7. Close the cartridge door to release the card weight so that it rests on top of the cards.

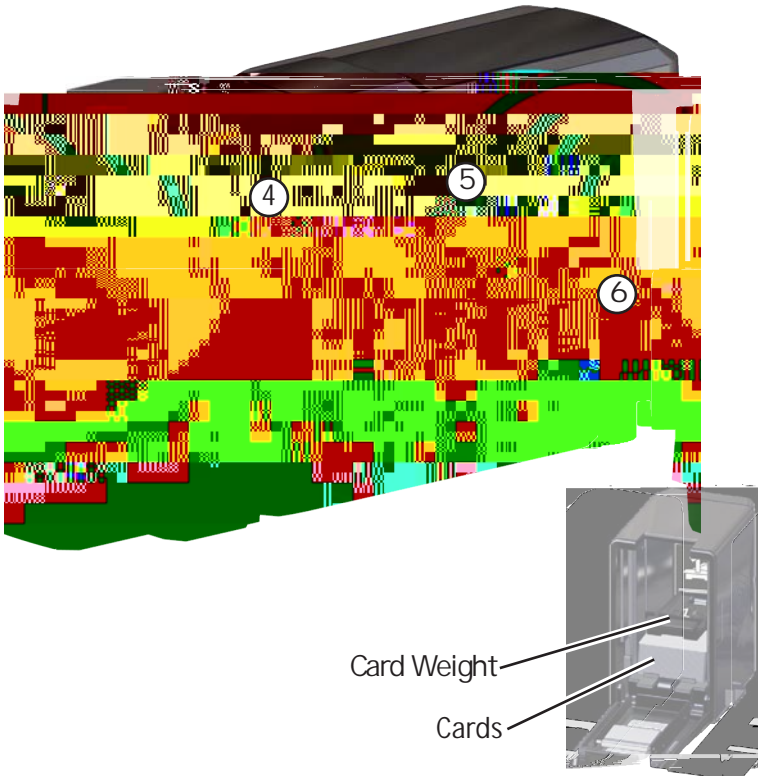


8. Repeat for each input hopper cartridge.
9. Return all locks to the locked position when finished.

# 11


 
a

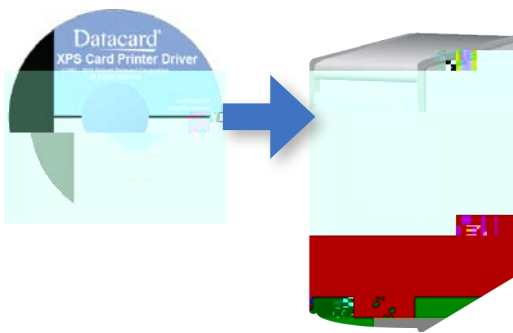

b

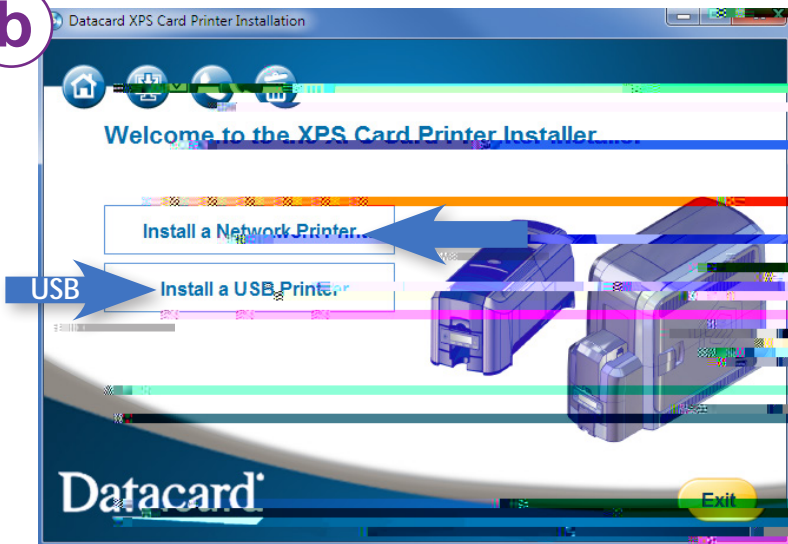 

## Install The Card Printer Driver (cont.)

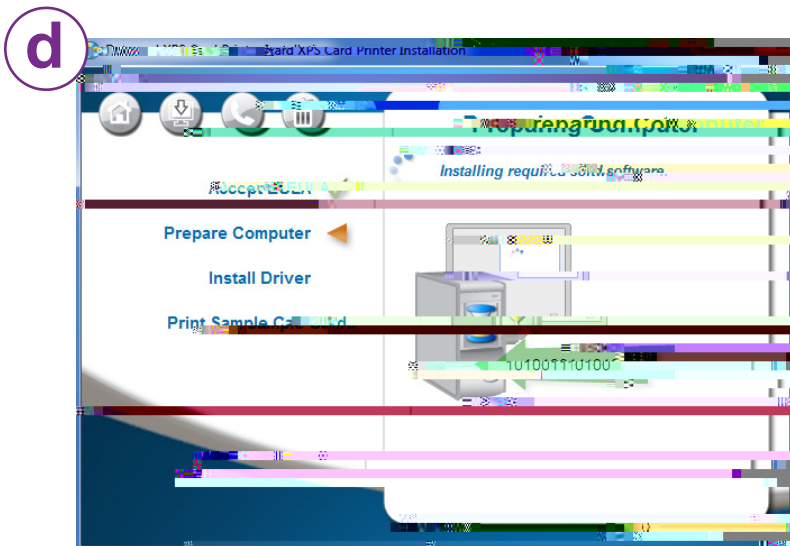 
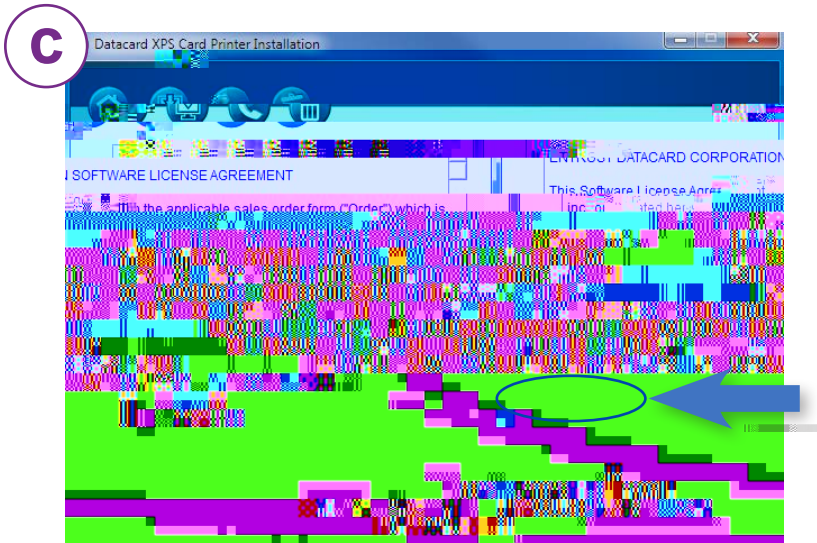 


Continue with:  
"USB Printer" on page 22 –OR–  
"Network Printer" on page 24

# CR805 Retransfer Card Printer
  
## Install The Card Printer Driver (cont.)

### USB Printer

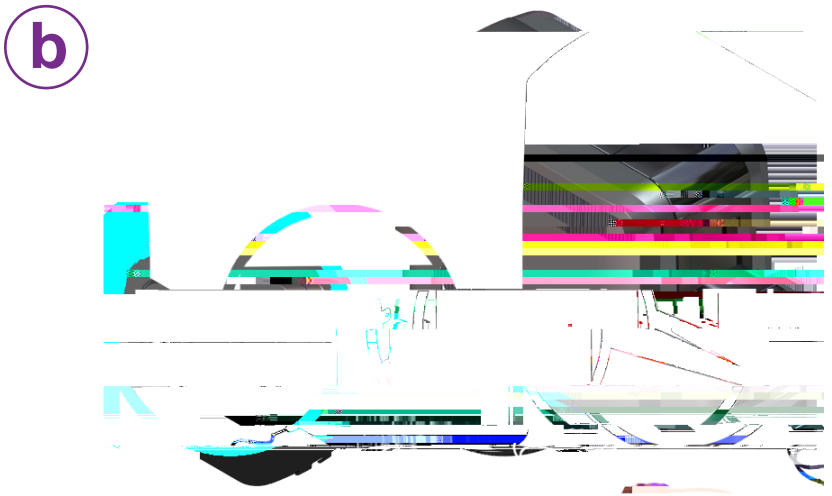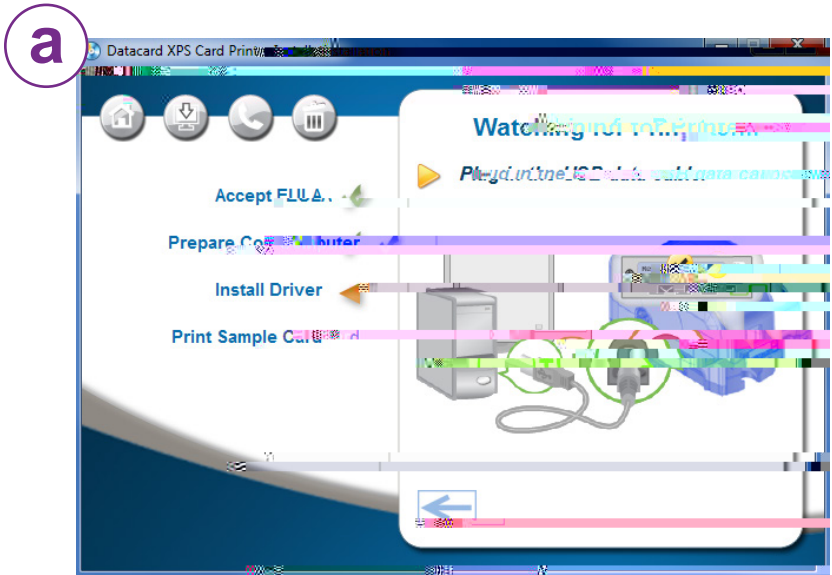





## Install The Card Printer Driver (cont.)

### USB Printer

 **c**

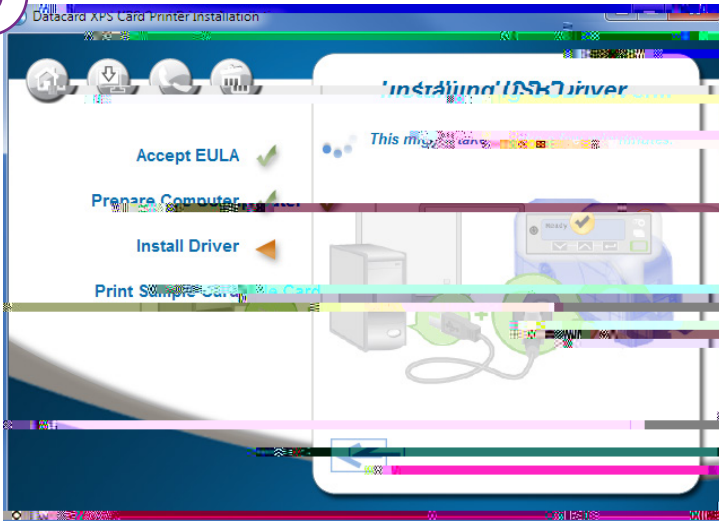

**d**

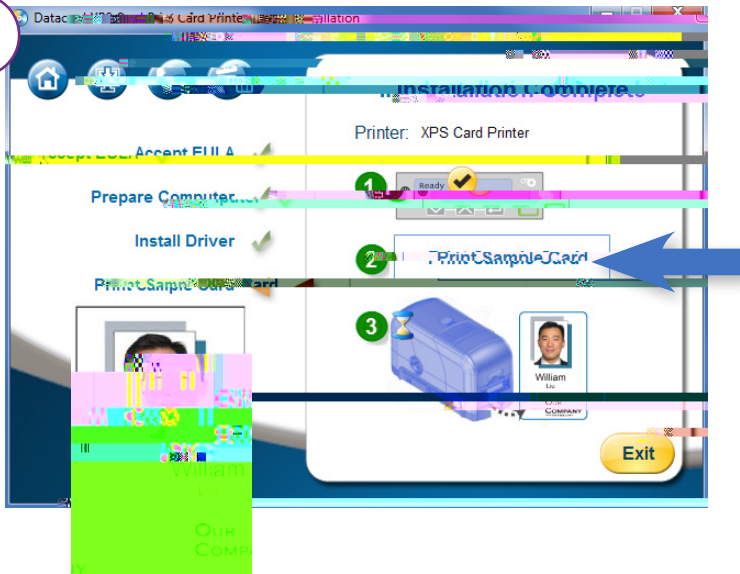 


# CR805 Retransfer Card Printer

---


## Install The Card Printer Driver (cont.)

### Network Printer

 
a

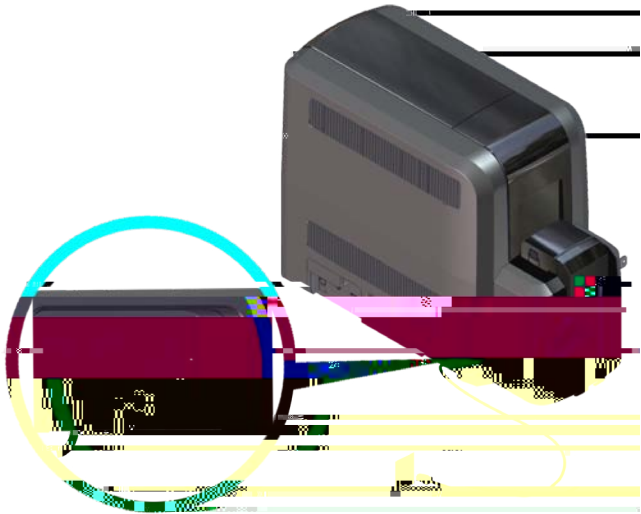

b


 


2X

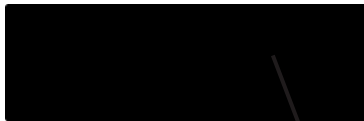 


## Install The Card Printer Driver (cont.)
  
### Network Printer

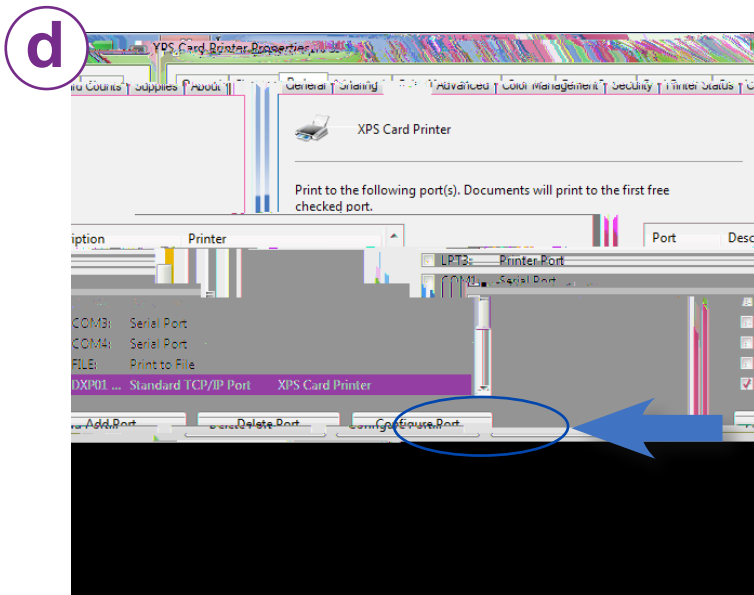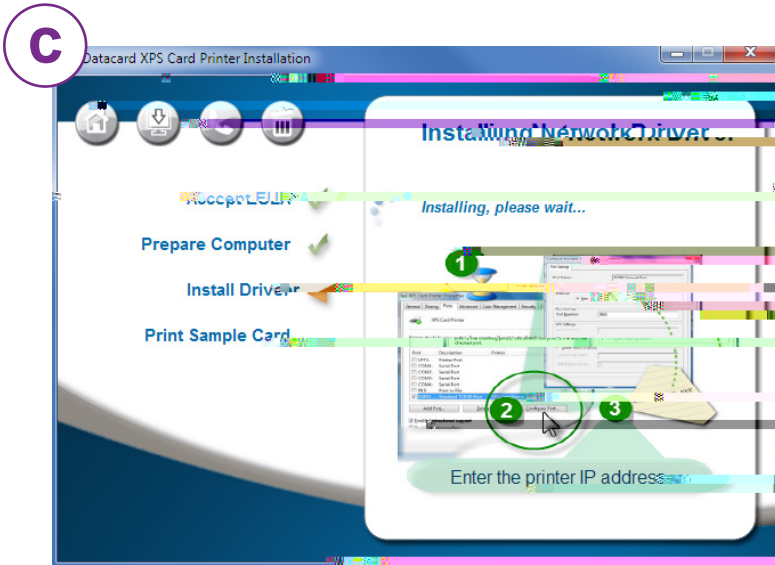

e

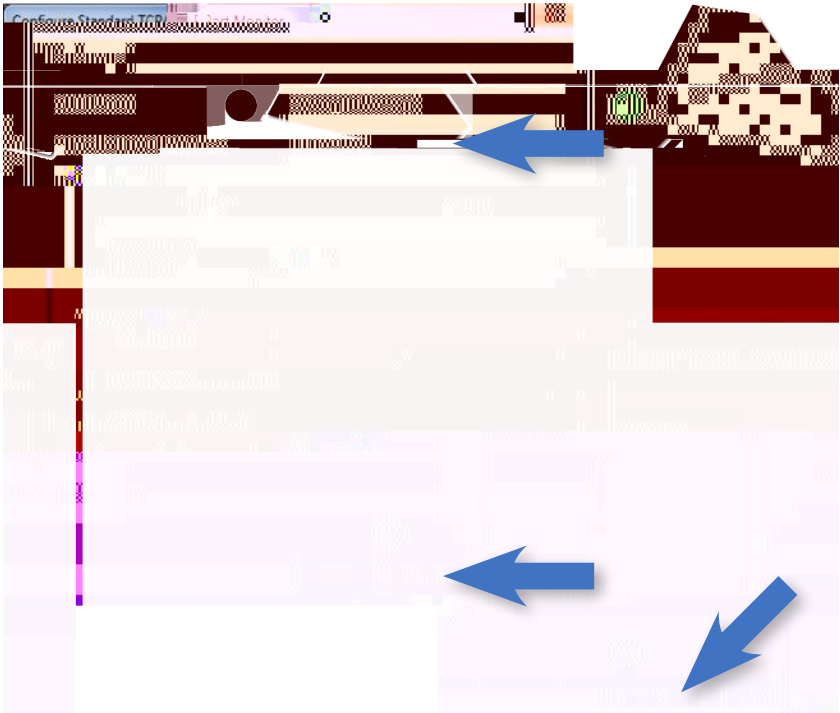 

**f**

. ~

# CR805 Retransfer Card Printer

---

## Notes

## Notes



ENTRUST

1187 Park Place  
Minneapolis, Minnesota 55379  
952.933.1223 • 952.933.7971 Fax  
[www.entrust.com](http://www.entrust.com)

Entrust, Sigma and the hexagon design are trademarks, registered trademarks and/or service marks, and Datacard is a registered trademark and service mark, of the Entrust Corporation in the United States and other countries. All other trademarks are the property of their respective owners.

© 2016 - 2021. The design and information contained in these materials is protected